

Installation:

STEP 1: Remove panel stringers and pickets from packaging or fully assembled panels from boxes. If needed layout the panels on the ground following the spacing on bottom stringer.

STEP 2: (Optional per product) Secure pickets by aligning them with the drilled holes in the top and bottom rail using a supplied tek screw as in Diagram 1.a .

STEP 3: Install 3"sq. Posts to decking keeping a maximum of 120" between each post (depending on product).

STEP 5: Cut top and bottom stringer using a metal bladed hack-saw to fit between installed posts if span is shorter then ordered peice.

STEP 6: Using supplied brackets (Diagrams 2.a, 2.b or 2.c) install panels by attaching them to the posts with included tek screws. Adjust angle-brackets before securing them as in Diagram 2.d .

Diagram 2.a
Standard Bracket

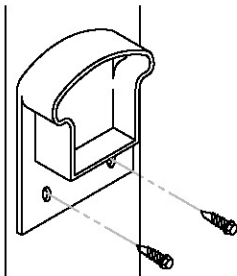


Diagram 2.b
Vertical Bracket

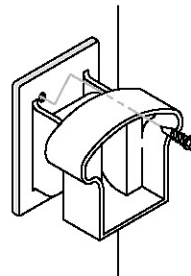


Diagram 2.c
Horizontal Bracket

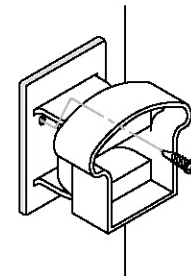


Diagram 2.d
Angle Bracket
Installation

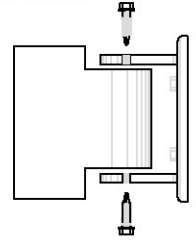


Diagram 3.a


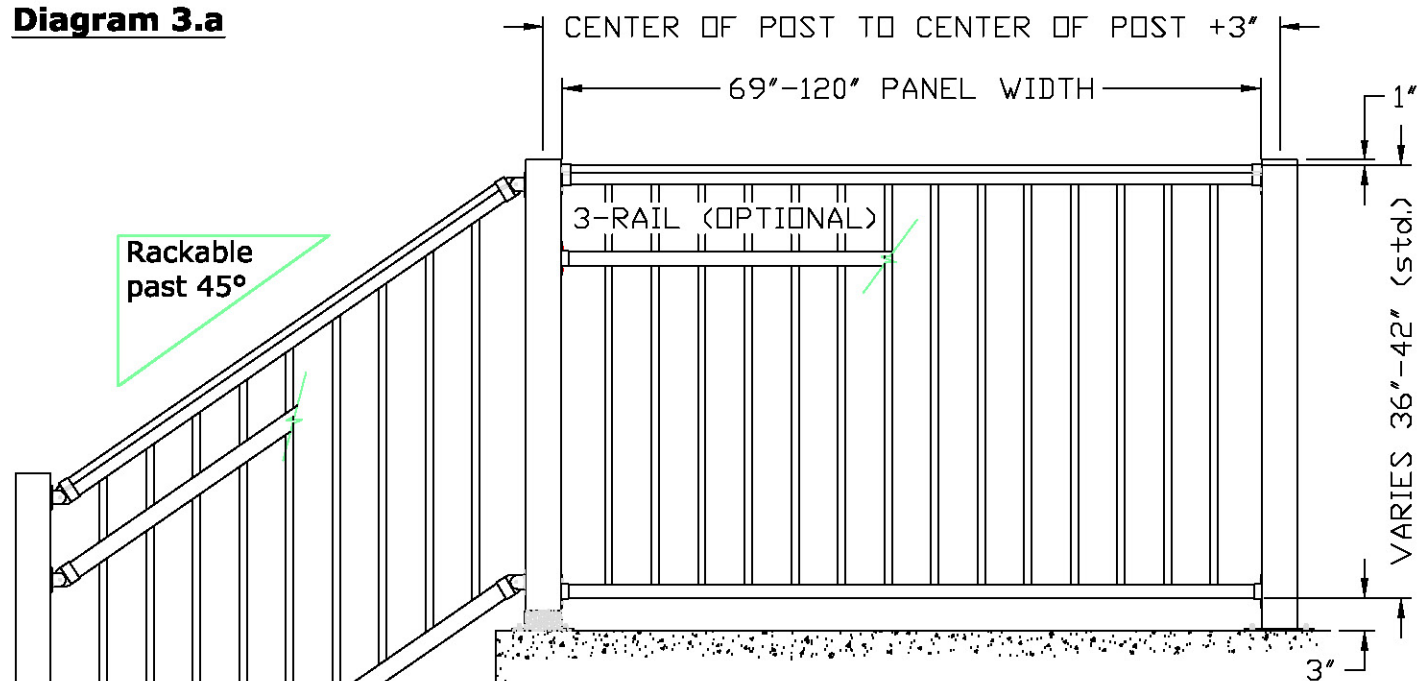


Diagram 1.a

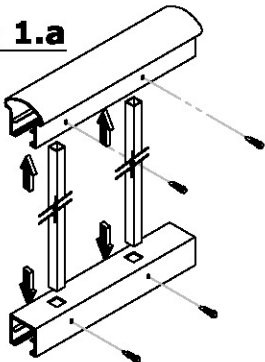

Avon Industrial Grade, Deck Railing 3-Rail

3"sq. Plated Posts shown 40-46" total length

36"-42"high x 69"-120" Sections, Pickets 4.75" O.C.

3.75" Between Pickets